

 
IZUMI

Instructions for Use (IFU)

Reciprocating Shaver

IZF-E863R / IZF-E863W


eyeredge
IZUMI
PREMIUM

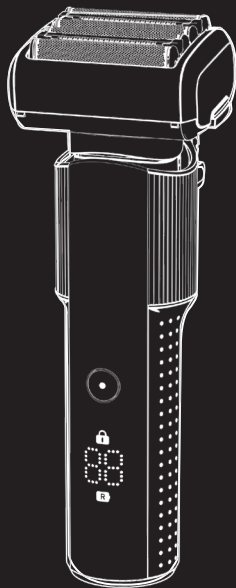

- Thank you for purchasing this reciprocating shaver.
- In order to use the product correctly and safely, please read the IFU completely before the first use of it. After reading the IFU, please keep it properly in a place that is readily accessible.

Easy start

1 Power on

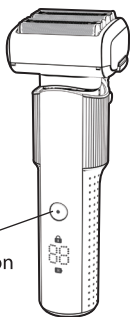

Power button

The product has been fully charged before leaving the factory, and can be used immediately.

If the product does not work or works for a very short time after power button is turned ON, it may due to insufficient natural discharge results in low remaining battery capacity. Please refer to part of *Method for Charging* on P8 for charging.

2 Shaving

1


Keep the outer blade at a right angle to the skin, and gently touch the skin with the blade.

2

Gently pull the skin with one hand, and slowly slide the blade in the opposite direction of the beard growth.


Dry shaving

Lower chin,
throat

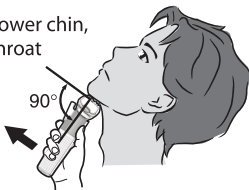

90°

Cheeks

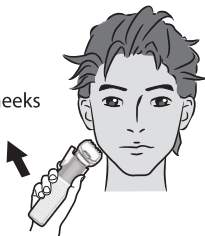

3 Maintenance
and cleaning
after use
⇒ P16

4 When something
goes wrong
⇒ P23

IFU for advanced edition



Precautions for safety	3	Before use
Precautions for use	5	
Bundle fittings	6	
Part name	7	
Method for Charging	8	Use
Method for Use	11	
Method for maintenance and cleaning	16	After use
Replacement of blades	21	When something goes wrong
Check whether it is faulty	23	
After-sales service	24	
Maintenance and cleaning supplies (sold separately)	25	
Specification	25	
Recycling of storage battery	26	

Precautions for safety




To prevent personal or property damage to the users and people around them, please fully read the *Precautions for Safety* and use the product properly.

Identifier class







Matters that must be observed in the IFU are classified as follows.

 Danger	Indicates the contents that may cause death or serious damage to personnel.
 Warning	Indicates the contents that may cause injury to personnel or damage to items.




Icon meaning

	Indicates the contents that need special attention.
	Indicates the prohibited contents.
	Indicates the contents that must be implemented.









Danger

	Do not disassemble, repair or reform the product by yourself. Otherwise, it may cause fire, electric shock or injury. If you need to repair the product, please consult the store where the product is purchased or our service window.
	Do not get the USB cable wet, pour water on it or wash it with water. Do not wash or wet shave the beard when using the AC mode. Otherwise, it may cause electric shock or short circuit of the product.
	Do not use or store the USB cable in the bathroom or a damp place. Otherwise, it may cause electric shock or short circuit of the product.
	Do not use the product on a device with an output voltage other than DC5V. Otherwise, it may cause fire, electric shock or injury.
	Power adaptor is not included. When maintaining and cleaning the product, please remove the USB cable and power adaptor from the socket. Do not pull out the product with wet hands. Otherwise, it may cause electric shock or injury.
	Do not use the product when the USB cable is damaged or is loose in the socket. Otherwise, it may cause fire, electric shock or injury.

Danger

	<p>Do not damage, pull hard, bend, twist, bind or process the USB cable. Do not press or clamp the USB cable with heavy weights. Do not wrap the cable around the shaver body when storing the product.</p> <p>Otherwise, it may cause cable damage, fire or electric shock.</p>
	<p>The following people must use the product under the guidance of a guardian or caregiver who understands the method for safely using the product.</p> <ul style="list-style-type: none"> • Children • Users who need help to use the product <p>※ It is not recommended that the above people use the product alone.</p>
	<p>Do not allow children to play with the product.</p> <p>Otherwise, it may cause scald, injury, fire or electric shock.</p>

Warning

	<p>The USB cable of other products may not be suitable for the plug in, charging and AC usage mode of the product. Do not use the dedicated USB cable of the product for other products or to charge other products.</p> <p>Be sure to use products with the rated output power DC5V and above 1A when using the commercially available power adapter.</p>
	<p>Check whether the blade is damaged or deformed before use. Do not use the blade if it is abnormal.</p> <p>Otherwise, it may cut the skin.</p>
	<p>Remove the USB cable and power adapter from the socket When not charging the product.</p> <p>Otherwise, it may cause fire, electric shock or injury.</p>
	<p>Do not press the blade hard.</p> <p>Otherwise, it may cause damage to the blade and injury to the skin.</p>
	<p>Do not make the needle or dust adhere to the interface and USB port.</p> <p>Otherwise, it may cause fire, electric shock or short circuit.</p>
	<p>Do not use the product for purposes other than face shaving or use it as commercial equipment.</p> <p>The product is a general household product. In daily use at home, accidents or product failure may occur when the product is used for purposes other than face shaving.</p>
	<p>Do not drop the product.</p> <p>Otherwise, it may cause product failure.</p>
	<p>Do not use the product with your family members or others.</p> <p>Otherwise, it may cause cross infection or inflammation.</p>


Precautions for use

- Do not contaminate the product with alcohol, diluent, volatile oil or other liquids, otherwise they may damage the plastic parts of the product, and cause fire or electric shock.
- Wash the shaver body with water and dry it when it is stained with shaving lotion, shaver oil, shower gel, facial wash and others. Without treatment, the plastic parts of the product may be cracked, and the coating may be cracked or discolored.
- A cloth is dipped in a neutral detergent diluted with water, twisted into a bundle and used to wipe the dirt on the shaver body.
- Do not charge the product in a place around which the temperature is lower than 5°C or higher than 35°C, in direct sunlight, or near heating units such as heating facilities and incandescent lamps. Otherwise, the charging time may be shortened, and accidents such as fire, electric shock and shaver body deformation may occur.
- An appliance should never be left unattended. Insulation degradation may cause electric leakage, fire or other accidents.
- The surface of the outer blade may be blackened when the skin oil or shaver oil floats on the surface.
Please gently wipe it with facial tissue or other objects before use. In addition, do not apply excessive shaver oil when maintaining and cleaning the product.
- Please use and keep the product in a place out of reach of children. Otherwise, it may cause accidents or personnel injury.
- Please keep it in a dry place after use. The inside of the shaver body or the blade may be condensed and rusted when placing the product in a humid place such as the bathroom, thereby leading to product failure.
- Be aware of the rashes or wounds, if any, on the skin when using the product. Using the product on the skin with rashes or wounds may cause injury or worsen skin problems.
- In a precision shaving mode, the head will operate in a stationary state. If a force is applied to the pop-up blade, the height of the blade in a precision shaving mode may change, causing failure to the head and blade. Therefore, please avoid this operation.

Bundle fittings

Check whether the following bundled fittings are complete before use.

■ Body

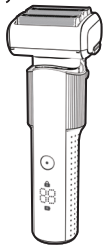

■ Protective cover



■ Cleaning brush



■ Storage box



■ Shaver oil Model: OIL-5



■ Instructions for Use (IFU) (This manual)



■ USB cable

※Non-transferable information



[IZF-E863R] about 0.6m
Model: IUC-06AC


[IZF-E863W] about 1.8m
Model: IUC-18AC

Before use


Part name

Before use


Body

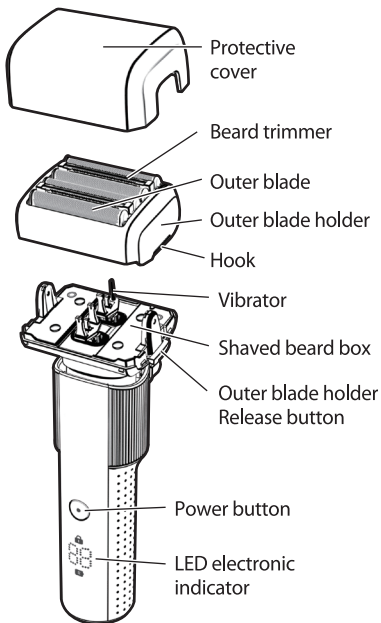

Rear side of the shaver body

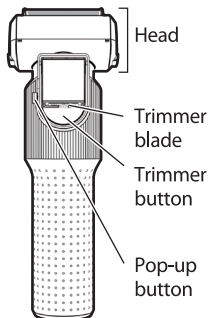

USB cable

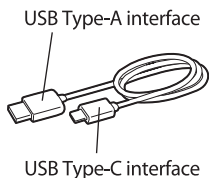

Bottom of the shaver body



Method for Charging



Warning

- **Be sure to use products with the rated output power DC5V and above 1A when using the commercially available power adapter.**
- Check whether the USB cable, power adapter and surrounding area of the socket are normal before charging.

Tip

- The recommended charging temperature is 5°C~35°C. Battery performance may degrade or charging may fail when the temperature is too high or too low.
- Charging time may change with the remaining battery capacity.

Use

Power off, and put the head cover.

Tip

1

- Charging fails when powering on.
- For your safety, be sure to put the protective cover before charging.

Insert the USB Type-C interface into the shaver body properly.



Warning

- **Check whether there are foreign objects, such as water droplets or dirt, between the USB Type-C interface and the shaver body before inserting the USB Type-C interface.** Otherwise, it may cause fire, electric shock or short circuit.

2

Method for Charging (continued)

3

Insert the USB Type-A interface into the USB Type-A port of the power adapter




Warning

- Check whether there are foreign objects, such as water droplets or dirt, in the USB Type-A port of the power adapter before inserting the USB Type-A interface. Otherwise, it may cause fire, electric shock or short circuit.




4

Insert the power adapter into the socket

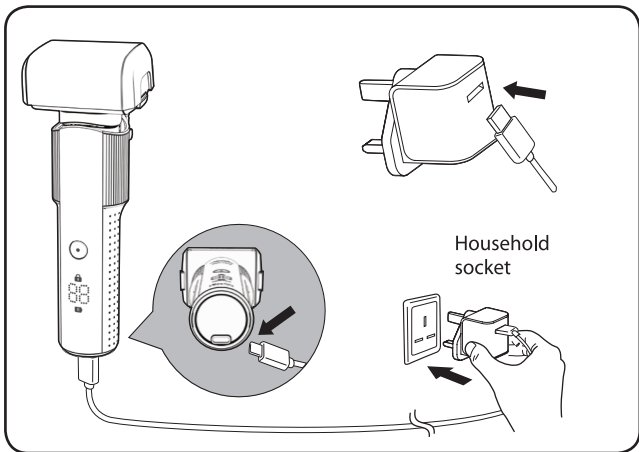- Start charging, and the charging indicator is on.
- Charging for about 2 hrs. After fully charged, all charging indicators are flickering simultaneously for 5 min and then off.
- During charging, the temperature of the shaver body and power adapter may rise, which is not a fault.



LED electronic indicator

Charging	Display unit 1% ("Lo" is displayed when the battery level is lower than 10%)	Charging completed	 Flickering → Off after 5 min
Charging reminder		In operation	 Rolling up and down

After full charged, remove the power adapter and USB Type-A interface from the socket

Remove the USB Type-C interface from the shaver body

5



Warning

- **Do not pull the cable when removing the power adapter from the socket, or disconnecting the USB Type-A and USB Type-C interface. Please hold the interface and pull it out.**

Otherwise, it may cause product failure or electric shock.

Life of storage battery

If the battery can be used two or three times after it is charged at the specified time, it means that the battery life may be running out. Please consult the store where the shaver is purchased. In addition, if the battery is left uncharged for more than half a year, its performance will be reduced due to self-discharge. Therefore, please charge the battery at least once half a year if you do not use it for a long time.

Method for Use


Travel lock

The travel lock can prevent the user from falsely triggering the power supply and start it.

- **Long press the power button for more than 3s to activate the travel lock mode.**
 - When powering off, short press the power button to power on. Further long press the power button for more than 3s to power off, and the travel lock indicator is flickering for 3s.
 - Press the power button again during standard mode operation to switch to the turbo mode. Further long press the power button for more than 3s to power off, and the travel lock indicator is flickering for 3s.
 - In the travel lock mode, press the power button, and the travel lock indicator is flickering.
- **Long press the power button again for more than 3s to deactivate the travel lock mode and power on.**
 - The travel lock indicator is off.

Tip

- The travel lock mode will be automatically deactivated during charging.

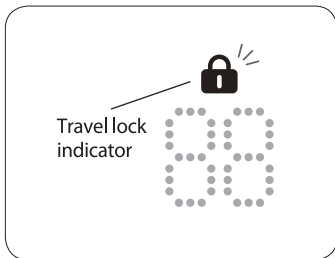

Power on/off

1

Hold down the side of the protective cover, and remove the cover

2

Check whether the blade is damaged or deformed

3

Press the power button to power on.

- When the blade is vibrating, start shaving.
- Press the power button again to switch to the turbine mode when the shaver body is working. The LED indicator will jump faster when the turbine is running.
- Press the power button again in the turbo mode to power off.

- **AI shaving**
The shaver will not slow down when it comes to the thicker part of the beard.


Tip

- The sensor may be unresponsive due to the thickness of the beard and how much hair shavings are accumulated in the blade holder, which is normal.

4

Press the power button to power off after use.

- Cleaning and maintenance are recommended after each use. (☞P16)
- Please put the protective cover and store the shaver after maintenance.

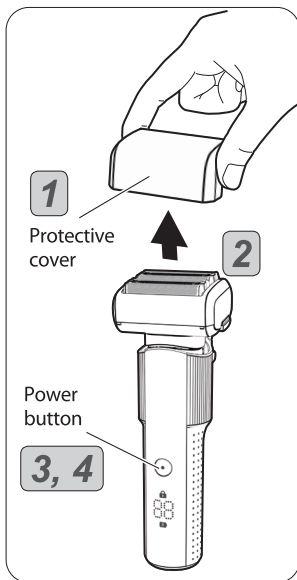

Method for Use (continued)

Use in the AC mode [IZF-E863W]

- Power adaptor is not included. Connect the USB cable with the power adapter before use. (AC mode)
For the connection of the USB cable and power adapter, please refer to *Method for Charging* (P8).



- **Do not get the USB cable and power adapter wet, pour water on them or wash them with water. Do not use the shaver in the bathroom or shower room. Do not wash the shaver body.**
Otherwise, it may cause electric shock or short circuit of the product.



- **Do not charge the product using other USB cables, or charge other products using the USB cable attached with the product.**
Otherwise, it may cause fire, electric shock or short circuit.
- Remove the USB cable after the product is used and not charged.
- If the remaining battery capacity is low, the shaver body may stop working and cannot be started. At this time, please charge the product for at least 1 min before use.
- In the AC mode, the temperature of the USB cable and power adapter may rise, which is not a fault.
- The AC mode will not be available when the storage battery is running out. In this case, please send it for repair (paid).

Operation on reserve power

The product can operate on reserve power. After the battery runs out and the shaver stops working, the beard can be shaved again (for about 3 mins) after turn on again.



Method for dry shaving

You can dry shave the beard using the product at any time.

Tip

- The beard may be pulled after growing for more than 2 days. Please shorten it using the trimmer blade before using the shaver.
- Please completely wipe the skin oil before using the shaver.

Keep the outer blade at a right angle to the skin, and gently touch the skin with the blade.

Tip

- The force applied to the skin is recommended to be about 400g.
- Do not press the blade hard, or slide the blade side to side.



Warning


- Too much pressure on the skin (the reference value is about more than 800g) may expedite the wear of blade, reduce the sharpness or damage the outer blade.
- If the shaving stress further concentrates on part of the outer blade, damage may be caused to the outer blade or the skin.

Gently pull the skin with one hand, and slowly slide the blade in the opposite direction of the beard growth.


Tip

- The beard under the chin and around the throat tends to grow at an angle, so it's a common area for missed spots while shaving. If you stretch the skin and shave in a way that lifts the beard, it becomes easier for the blade to catch the hairs.

Lower chin, throat

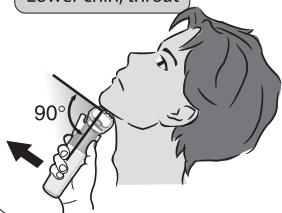

Cheeks

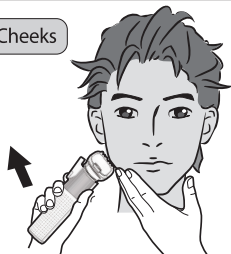

Method for Use (continued)



Method for using trimmer blade

- 1 Slide the trimmer button down
Keep the blade touch the skin at a right angle (90°) and shave the beard.

Tip

- Do not turn on or off the trimmer blade when the head is tilted.

- 1 Trimmer button

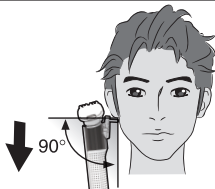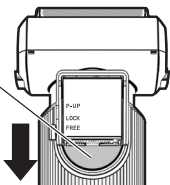

Switch the FREE and LOCK mode of the head used


- When the head needs to be close to the skin

Switch to the free mode (FREE)



- When the head needs to be fixed

Switch to the lock mode (LOCK)

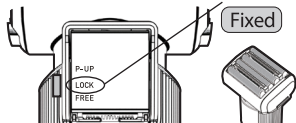



Method for use the precision shaving mode

Please use the precision shaving mode when you need to shave under the nose or shave the hairline on the temples.

- 1 Push the pop-up button to the P-UP position, keep the blade touch the skin at a right angle (90°) and shave the beard.

1

Pop-up button

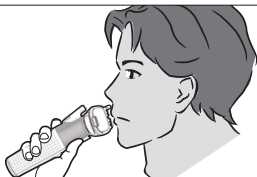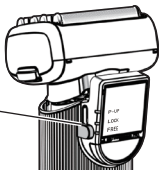

Method for maintenance



Danger

- When performing maintenance, unplug the AC adapter from the outlet. Also, do not plug or unplug it with wet hands, as it can cause electric shock or injury.

Cleaning and maintenance are recommended after each use to maintain the performance of the product and prevent the shaved beard from falling out from the shaver head.

Method for washing

1

Power off.


Apply the dedicated cleaning foam of washing or other commercially available hand sanitizers to the outer blade.

2




Warning

- Do not use dedicated detergents for the kitchen, bathroom, toilet and other places. Otherwise, it may cause shaver body deformation or damage.

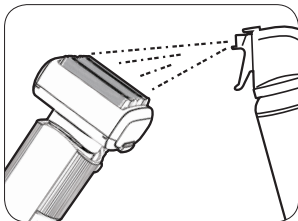

3

Add a small amount of water to the outer blade (only when commercially available hand sanitizers are used)

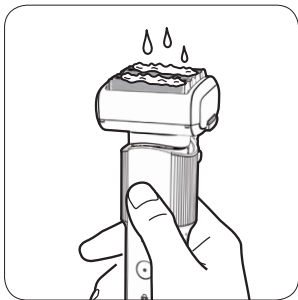

After use


Method for maintenance and cleaning (continued)

4

Power on, and hold for about 15s.

- ① Power on.
- ② Hold for about 15s.
- ③ Power off

Head release
button of
the outer blade

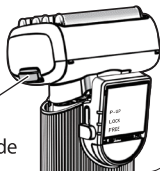


5

Press the head release button of the outer blade holder on both sides to remove the outer blade holder.

Warning



- Be sure to power off before disassembly.

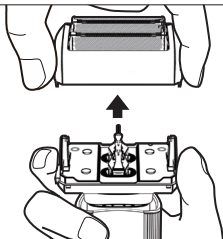


Wash clearly with water (cold water or warm water of about 30°C)

Warning



- **Do not use boiling water.** Otherwise, it may cause scald or shaver body deformation.
- **Do not soak the shaver.** Otherwise, it may cause failure to the shaver body.
- **Please timely remove the shaving foam or gel, if any, on the blade.** Deposits on the blade will cause motor overload and burning.

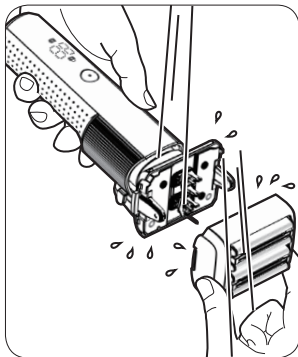

6

Dry the wet part




Warning

- **Do not dry the shaver body using hair dryer or other devices.**

Otherwise, it may cause shaver body deformation or damage.

7

- ① Wipe off the water droplets with a towel or other things.
- ② Remove the outer blade holder and naturally dry the shaver body completely.

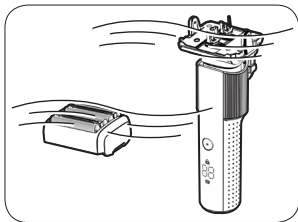

8

Install the outer blade holder with the identifier "6 BLADES" facing towards yourself.

Apply the attached shaver oil.




Warning

- **Be sure to power off when wiping off the shaver oil.**
Otherwise, it may cause blade damage or personnel injury.
- **Do not press the blade hard.**
Otherwise, it may cause blade damage or personnel injury.

- The shaver oil applied can make the blade vibrate more smoothly and provide the user with a comfortable shaving experience.

- ① Apply a drop of shaver oil to each blade.
- ② Power on and hold for 10s, and then power off.
- ③ Wipe off excessive oil with paper tissue.

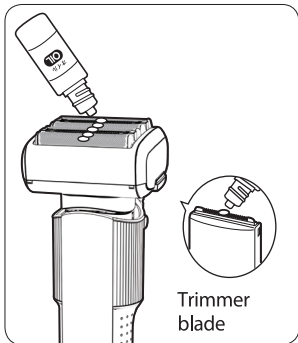

9


Method for maintenance and cleaning (continued)

Method for using the cleaning brush

1

Power off.

Power button

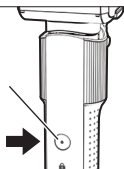


2

Press the head release button of the outer blade holder on both sides to remove the outer blade holder.

 **Warning**

- Be sure to power off before disassembly.

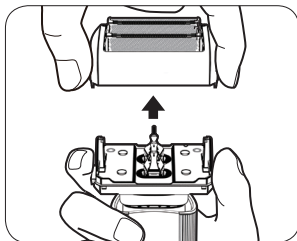


Clean using the attached cleaning brush.


 **Warning**

- Do not clean the outer blade and inner blade using the cleaning brush. Otherwise, it may cause blade damage.

3

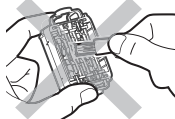

Outer blade, inner blade

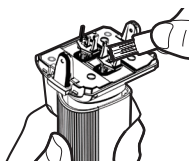 

Shaved beard box




Trimmer blade

4

Install the outer blade holder from directly above with the identifier "6 BLADES" facing towards yourself.

Tip

When the outer blade holder is improperly installed, the vibrator of the shaver body may be stuck and cannot be driven normally. If the vibrator is stuck, please reinstall the outer blade holder.

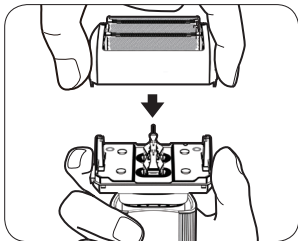

5


Apply the attached shaver oil.

Replacement of blades

The blade of the shaver is a consumable. Beyond the service life, the blade will be less sharp, and may be damaged and cut the skin. In order to ensure a good shaving experience, it is recommended to replace the blade within about 5 years.

Outer blade and inner blade kits

SS-E863

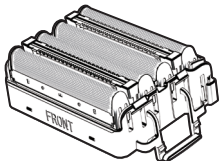

- The time for blade replacement is for reference only. The service life of the blade will vary according to the actual use.
- Please purchase the replacement blades from household appliance stores and other channels.
- After replacing the outer blade and the inner blade, please apply the shaver oil before use.

Before replacing the blade



Warning


- Be sure to power off before replacement.

1

Power off.

2


Press the head release button of the outer blade holder on both sides to remove the outer blade holder.

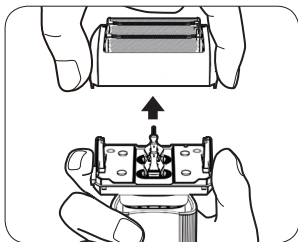

Method for replacing the blade kit


1

Hold the hooks on both sides and lift them up to remove the blade.

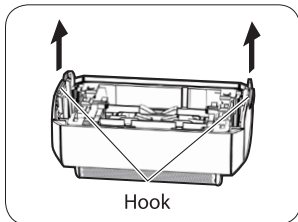

2

Find the front ("FRONT") of the new blade kit as shown in the figure, align it with the side with the icon "6 BLADES" and insert it into the blade holder, until you hear a "click".

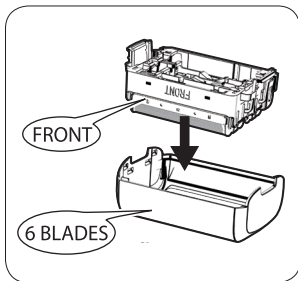


After replacing the blade

Install the outer blade holder with the identifier "6 BLADES" facing towards yourself.

Tip

- When the outer blade holder is improperly installed, the vibrator of the shaver body may be stuck and cannot be driven normally. If the vibrator is stuck, please reinstall the outer blade holder.

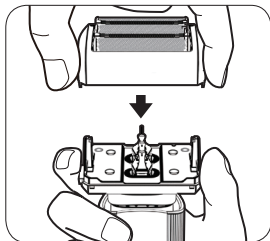

When something goes wrong

Check whether it is faulty

If you suspect that the device is faulty, please consult the following content for treatment. If the problem is still not solved after treatment, please consult the store where the device is purchased or our service window.

Symptom/ inspection item	Possible reasons	Solutions
The shaved beard flies everywhere.	The shaved beard and other dirt are lumped.	Please clean after each shaving. (☞P16)
	The outer blade holder is not properly installed.	Please properly install the outer blade holder. (☞P20)
It is smelly.	The shaved beard and other dirt are lumped.	Please clean after each shaving. (☞P16)
The sharpness of the blade decreases.	The shaved beard and other dirt are lumped.	Please clean after each shaving. (☞P16)
	The outer blade is damaged and deformed.	Please replace the blade. (☞P21)
	The service life of the blade.	
The blade is heating.	No shaver oil is applied to the blade.	Please apply shaver oil. (☞P18)
It can be used fewer times after each charge.	The surrounding temperature is not within the recommended temperature range in use.	The recommended temperature is 5°C ~35°C. The shaver may not work when it is not used within the recommended temperature range.
The shaver does not work after pressing the power button.	The remaining capacity of the storage battery is low.	Please charge. (☞P8)
	To ensure safety, the protection function of storage battery has been activated.	Please connect the USB cable and power adapter for charging. (☞P8) The protection function will be reset after charging.
	It is left unused for more than half a year.	Please charge. To avoid battery deterioration, please charge the battery at least once half a year if you do not use it for a long time.
The skin is blackened after shaving.	The skin oil or shaver oil floats on the surface.	<ul style="list-style-type: none"> • Please gently wipe it with facial tissue or other objects. • Do not apply excessive shaver oil.

After-sales service

About the warranty

Be sure that information on the warranty is attached such as “Store Name” and “Date of Purchase” has been filled in. Please read the warranty content carefully and keep this warranty properly.

Calculated from the date when the product is purchased, the warranty period is 5 years for the shaver body.

The warranty is not international; it is only valid in the country of purchase.

About authorized repair

In case of abnormalities or failure during use, or other situations such as damage, we can provide paid repair according to the customer’s wish if the product function can be maintained by repair. Free repair can be provided according to the content of this warranty during the warranty period. Please authorize the store where the product is purchased. If you cannot consult the store, please consult our service window.

Storage life of functional repair parts

The company will keep the functional repair parts (parts necessary for maintaining the product function) of the product within 6 years after the production of the reciprocating shaver is halted.

Service window

Contact information for consultation on product related matters

If you have any questions for matters related to the product, please consult us at the following contact information.

Maxell Asia, Ltd.

Units nos. 03B-06, 13/F, 909 Cheung Sha Wan Road,

Cheung Sha Wan, Kowloon, Hong Kong

Tel: (852) 2730 9243



Maxellhk



Maxellhk



www.maxell.com.hk

Maintenance and cleaning supplies (sold separately)

The following dedicated products are recommended to maintain and clean the product. Please purchase the maintenance and cleaning supplies from household appliance stores and other channels (only available in certain regions).

Shaver oil

OIL-5



Specification

Power supply	Charging 「IZF-E863R」 Charging and AC 「IZF-E863W」
Blade operation mode (main blade)	Reciprocating
Blade operation mode (Trimmer blade)	
Standard charging time	About 2 hrs
Storage battery	Lithium battery
Power consumption	About 7W
Dimension	W 63 X T 49 X H 172 (mm)
Shaver weight	About 250g

Recycling of storage battery



Danger

- **Do not use the storage battery again once it is removed.**
The storage battery is exclusively used for this device. Do not use it on other devices.
- **Do not damage or hit the storage battery. Do not disassemble or reform the storage battery by yourself.**
- **Do not keep the removed storage battery within the reach of children.**
- **Do not touch the storage battery with your hands in case of leakage.**
The liquid in the storage battery, if entering the eye accidentally, may cause blindness. If the leak comes into contact with your eye or skin accidentally, wash it immediately and then consult a doctor.
- **Do not disassemble the product except the discarded product.**
Otherwise, it may cause fire, electric shock or injury. The product cannot be repaired again once it is disassembled. If you need to replace the battery or repair the product, please authorize the store where the product is purchased or our customer consultation center.



Recycling of lithium battery

- The product contains batteries and/or electronic waste that can be recycled. To protect the environment, please do not dispose of it in regular household waste. Instead, take it to designated electronic waste collection points available in your country for proper recycling.
- For further details, please consult the relevant local government department or organization in your residential region.

Recycling of storage battery (continued)

Method for removing the battery from the discarded product



Warning

- The following instructions are for guidance of product abandonment only, and cannot be used for guidance of repair. Please note in advance that the original performance of the product may not be used normally if you disassemble the product by yourself.

1

Please power on when the USB cable and power adapter are not connected, and run out of the storage battery.



Warning

 
- Residual power in the storage battery may cause electric shock, fire or scald.

2

Remove a screw from the bottom of the shaver body, and remove the bottom cover.

2

Bottom cover

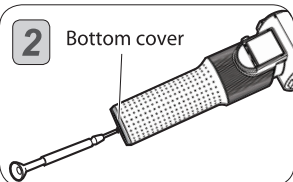


3

Remove the front cover using the straight screwdriver or other tools.

3

Front panel

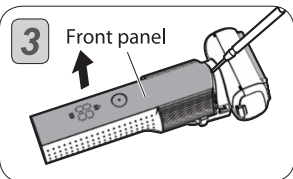


4

Remove the trimmer blade button at the back using the straight screwdriver or other tools.

4

Trimmer blade button

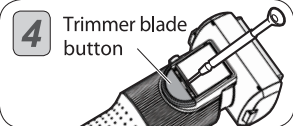


5

Remove a screw at the back.

5

Screw

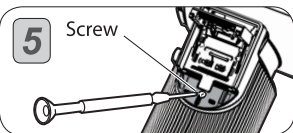


6

Remove the shaver body cover along the arrow.

6

Shaver body cover

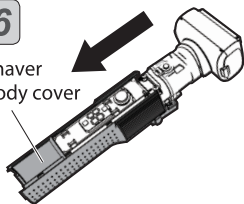


7

Remove a screw in the inner cover.

7

Screw

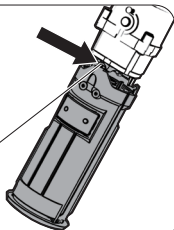


8

Remove the inner cover using the straight screwdriver or other tools.

8

Inner cover

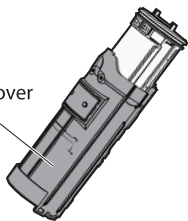


9

Cut the wire using pliers or other tools, and cover the wiring part of the removed storage battery with plastic tapes for insulation.

9

Storage battery

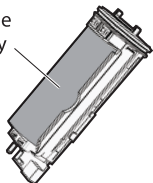

When something goes wrong

Warranty regulations

In case of failure when the product is normally used according to the IFU and other documents during the warranty period, you can repair or replace the product in our company according to this warranty. For details, please consult the store where the product is purchased or our service window.

- 1) The repair will be paid in any of the following cases during the warranty period.
 - I. Failure or damage is caused since the product is not used according to the IFU or is improperly reformed or repaired.
 - II. Failure or damage is caused since the product is not properly kept after purchase (such as falling), or is moved or transported.
 - III. Failure or damage is caused by natural disasters, such as fire, earthquake, flood and lightning, and other external reasons such as public hazards, salt damage, gas damage (such as sulfide gas) or abnormal voltage.
 - IV. Failure or damage is caused when the product is used as commercial equipment (the product is used as spare parts in vehicles, ships and other commercial facilities) or for purposes other than general household application (including display).
 - V. This warranty or proof of purchase (such as receipt) is not provided.
 - VI. The date of purchase, customer name and store are not contained in this warranty, or the text is altered.
 - VII. Gifts and consumables other than the shaver body.
 - VIII. A second-hand product purchased from auctions, second-hand stores or other channels.
- 2) The customer shall pay for the delivery of the product during the warranty period.
- 3) In case of relocation, please consult the store in advance.
- 4) This warranty is not additionally issued. Please keep it properly to avoid loss.
- 5) This product contains batteries and/ or electronic waste that can be recycled. To protect the environment, please do not dispose of it in regular household waste. Instead, take it to designed electronic waste collection points available in your country for proper recycling.
- 6) The warranty is not international; it is only valid in the country of purchase.

※Please note in advance that the company may use the personal information (the content filled in the warranty) filled by the customer for the free repair service and safety inspection during the warranty period.

※Free repair is provided according to the conditions in this warranty within the time stated in this warranty. Therefore, this warranty does not limit the customer's legal rights. Beyond the warranty period, if you need repair or have any question, please consult the store where the product is purchased or our service window.

